



# Linear Servo Conversion Kit with Ball Bearing

**Note:** Before the EMS Linear Servo Conversion Kit can be installed onto the Futaba S-148 servo, the servo output shaft should be in the CENTER position. An easy way to do this is to connect the servo to a receiver and battery pack and use the transmitter with the trim and stick set to the middle positions to center the output shaft on the servo. Once that is complete, disconnect the servo from the receiver and continue with the following steps.

